

RS 7/C/008 - 2015

Published June 2015

EUROVENT RATING STANDARD for DX AIR COOLERS AIR COOLED CONDENSERS DRY COOLERS

RS 7/C/008 - 2015

Published June 2015

Supersedes RS 7/C/008 - 2014

Editing Checking Approval Véronique NOEL Jean FOURCROY Compliance Committee HE CPPC 5 March 2015 13 May 2015 10 March 2015 1 June 2015

Comes into effect from:

4 June 2015

Modifications as against last version:

No.	Modifications	Section	Page
1	Clarification of the scope regarding refrigerants	II and V.3, table	4 and 9
	Clarification of the scope regarding reingeralits	3	resp.
2	Modification of the paragraph about correction factor altitude	V.3, e	9
3	Definition of a Basic Model Group (BMG)	III.5	6
4	Correction of the unit of fan power input [W]	VI	10
5	Correction of the formula for SA	III.3, a	5
6	Identification of the dimension B on the drawing	III.3, b	6
7	Update of the list of tolerances	VII	11

This document is strictly reserved for use in the programmes of the Eurovent Certified Performance mark. Reproduction or translation of any part of the document is forbidden without written permission from Eurovent Certita Certification.

> Published by Eurovent Certita Certification SAS 48-50 rue de la Victoire - 75009 Paris, France Tel: +33 1 75 44 71 71 E-mail: <u>v.noel@eurovent-certification.com</u>

TABLE OF CONTENTS

II. SCOPE 4 III.1 DEFINITIONS 4 III.1 Product types and modularity. 4 III.2 Capacity and energy efficiency 5 III.3 Surface area 5 a. Tubes and fins. 5 Figure 1: Definitions for surface area calculation. 5 b. Micro-channels. 6 III.4 Heat Fux. 6 IV. TESTING REQUIREMENTS 6 IV.1 Refrigerant. 6 IV.2 Air flow and Thermal performance. 7 Table 1: Standard Conditions (SC's) for Dx Air Coolers [EN 328] 7 IV.3 Sound performance. 7 V.1 Fan speeds. 7 V.2 Sound data 7 V.2 Sound data 7 V.3 Correction factors for Dx Air Coolers at athard conditions. 8 a. Correction factor (C1) for Dx Air Coolers at athard conditions. 8 Figure 2: Wet coil factor (C1) for Dx Air Coolers at athar conditions. 8 8 Decretion for timetrature differences (C2) for Dx Air Coolers at athar conditio	I.	P	JRPOSE	4
III.1 Product types and modularity	Ш.	S	COPE	4
III.1 Product types and modularity	Ш.	D	EFINITIONS	4
III.2 Capacity and energy efficiency 5 III.3 Surface area 5 a. Tubes and fins 5 Figure 1: Definitions for surface area calculation 5 b. Micro-channels 6 III.4 Heat Fux 6 IV. TESTING REQUIREMENTS 6 IV.1 Refrigerant 6 IV.2 Air flow and Thermal performance 7 Table 1: Standard Conditions (SC's) for Dx Air Coolers [EN 328] 7 IV.3 Sound performance 7 V.1 Fan speeds 7 V.2 Sound data 7 V.3 Correction factors 8 a Correction for wet coil factors for Dx Air Coolers. 88 Table 3: Wet coil factor (C1) for Dx Air Coolers. 8 8 Figure 2: Wet coil factor (C1) for Dx Air Coolers at standard conditions. 8 8 Figure 2: Wet coil factor (C1) for Dx Air Coolers at other conditions. 8 8 b. Correction for temperature differences (C2) for Dx Air Coolers and Air Cooled Condensers. 8 c. Refrigerant correction factors (C3)				
III.3 Surface area 5 a. Tubes and fins. 5 Figure 1: Definitions for surface area calculation 5 b. Micro-channels. 6 III.4 Heat Fux 6 IV. TESTING REQUIREMENTS 6 IV.1 Refrigerant 6 IV.2 Air flow and Thermal performance 7 Table 1: Standard Conditions (SC's) for Dx Air Coolers [EN 328] 7 IV.3 Sound performance 7 V.1 Fan speeds 7 V.1 Fan speeds 7 V.2 Sound data 7 V.3 Correction factors 8 a Correction for twet coil factors for Dx Air Coolers. 8 a. Correction for temperature differences (C2) for Dx Air Coolers. 8 b. Correction factors 8 8 Figure 2: Wet coil factor (C1) for Dx Air Coolers at standard conditions. 8 8 c. Refrigerant correction factors (C3) 9 9 Table 3: Refrigerant correction factors (C3) 9 9 d. Correctio				
a. Tubes and fins				
Figure 1: Definitions for surface area calculation 5 b. Micro-channels 6 III.4 Heat Fux 6 IV. TESTING REQUIREMENTS 6 IV. TESTING REQUIREMENTS 6 IV.2 Air flow and Thermal performance 7 Table 1: Standard Conditions (SC's) for Dx Air Coolers [EN 328] 7 IV.3 Sound performance 7 V. RATING REQUIREMENTS 7 V.1 Fan speeds 7 V.2 Sound data 7 V.3 Correction factors 8 a. Correction for wet coil factors for Dx Air Coolers. 8 Table 3: Wet coil factor (C1) for Dx Air Coolers at standard conditions. 8 Figure 2: Wet coil factor (C1) for Dx Air Coolers at other conditions. 8 b. Correction for temperature differences (C2) for Dx Air Coolers and Air Cooled Condensers. 8 c. Refrigerant correction factors (C3) 9 Table 3: Refrigerant correction factors (C4) 9 mable 3: Refrigerant correction factors (C4) 9 e.				
b. Micro-channels				
IV. TESTING REQUIREMENTS 6 IV.1 Refrigerant 6 IV.2 Air flow and Thermal performance 7 Table 1: Standard Conditions (SC's) for Dx Air Coolers [EN 328] 7 IV.3 Sound performance 7 V. RATING REQUIREMENTS 7 V.1 Fan speeds 7 V.2 Sound data 7 V.3 Correction factors 8 a. Correction for wet coil factors for Dx Air Coolers. 8 a. Correction for wet coil factors for Dx Air Coolers at standard conditions. 8 Figure 2: Wet coil factor (C1) for Dx Air Coolers at standard conditions. 8 b. Correction for temperature differences (C2) for Dx Air Coolers and Air Cooled Condensers. 8 c. Refrigerant and Ethylene Glycol correction factors (C3) 9 Table 3: Refrigerant correction factors (C4) 9 d. Correction for immeterials (C4) 9 mabels 5: Fin material correction factors (C4) 9 e. Correction for altitude and ambient air pressure (C5) 9 V.4 Additional temperature difference for Air cooled condensers 9 v.5 Correction for Liquid Pressure Drop. 7 V.6 Energy ratio and classes 10 Table 6: Correctin for		. •	Micro-channels	6
IV.1 Refrigerant. 6 IV.2 Air flow and Thermal performance. 7 Table 1: Standard Conditions (SC's) for Dx Air Coolers [EN 328] 7 IV.3 Sound performance. 7 V. RATING REQUIREMENTS 7 V.1 Fan speeds. 7 V.2 Sound data 7 V.3 Correction factors. 8 a. Correction for wet coil factors for Dx Air Coolers. 8 a. Correction for wet coil factors for Dx Air Coolers at standard conditions. 8 Figure 2: Wet coil factor (C1) for Dx Air Coolers at other conditions. 8 Figure 2: Wet coil factor (C1) for Dx Air Coolers at other conditions. 8 b. Correction for temperature differences (C2) for Dx Air Coolers and Air Cooled Condensers. 8 c. Refrigerant correction factors (C3) 9 9 d. Correction for fin materials (C4) 9 9 d. Correction for fin materials (C4) 9 9 e. Correction for altitude and ambient air pressure (C5) 9 9 v.4 Additional temperature difference for Air c		III.4	Heat Fux	6
IV.1 Refrigerant. 6 IV.2 Air flow and Thermal performance. 7 Table 1: Standard Conditions (SC's) for Dx Air Coolers [EN 328] 7 IV.3 Sound performance. 7 V. RATING REQUIREMENTS 7 V.1 Fan speeds. 7 V.2 Sound data 7 V.3 Correction factors. 8 a. Correction for wet coil factors for Dx Air Coolers. 8 a. Correction for wet coil factors for Dx Air Coolers at standard conditions. 8 Figure 2: Wet coil factor (C1) for Dx Air Coolers at other conditions. 8 Figure 2: Wet coil factor (C1) for Dx Air Coolers at other conditions. 8 b. Correction for temperature differences (C2) for Dx Air Coolers and Air Cooled Condensers. 8 c. Refrigerant correction factors (C3) 9 9 d. Correction for fin materials (C4) 9 9 d. Correction for fin materials (C4) 9 9 e. Correction for altitude and ambient air pressure (C5) 9 9 v.4 Additional temperature difference for Air c	IV.	TE	ESTING REQUIREMENTS	6
IV.2 Air flow and Thermal performance 7 Table 1: Standard Conditions (SC's) for Dx Air Coolers [EN 328] 7 IV.3 Sound performance 7 V. RATING REQUIREMENTS 7 V.1 Fan speeds. 7 V.2 Sound data 7 V.3 Correction factors 8 a. Correction for wet coil factors for Dx Air Coolers. 8 a. Correction for wet coil factors for Dx Air Coolers. 8 Table 3: Wet coil factor (C1) for Dx Air Coolers at standard conditions 8 Figure 2: Wet coil factor (C1) for Dx Air Coolers at other conditions 8 b. Correction for temperature differences (C2) for Dx Air Coolers and Air Cooled Condensers. 8 c. Refrigerant and Ethylene Glycol correction factors (C3) 9 Table 3: Refrigerant correction factors (C3). 9 Table 3: Refrigerant correction factors (C3). 9 d. Correction for timmaterials (C4) 9 Table 5: Fin material correction factors (C4) 9 e. Correction for altitude and ambient air pressure (C5) 9 V.4 Additional temperature difference for Air cooled condensers 9 V.5 Correction factor Clabel.wet for determination of R for Dx Air Coolers 10 Table 6: Correctio			Refrigerant	6
Table 1: Standard Conditions (SC's) for Dx Air Coolers [EN 328] 7 IV.3 Sound performance 7 V. RATING REQUIREMENTS 7 V.1 Fan speeds 7 V.2 Sound data 7 V.3 Correction factors 8 a. Correction for wet coil factors for Dx Air Coolers. 8 Table 3: Wet coil factor (C1) for Dx Air Coolers at standard conditions. 8 Figure 2: Wet coil factor (C1) for Dx Air Coolers at other conditions 8 c. Refrigerant and Ethylene Glycol correction factors (C3) 9 Table 3: Refrigerant correction factors (C3) 9 9 d. Correction for fin materials (C4) 9 d. Correction for administic (C4) 9 e. Correction for administic (C4) 9 d. Correction for fin material correctors for Air cooled condensers 9 V.4 Additional temperature difference for Air cooled condensers 9 V.5 Correction for Liquid Pressure Drop. 7 V.6 Energy ratio and classes 10 Table 6: Correction factor Clabel, wet for determination of R for Dx Air Coolers <td< th=""><th></th><th>IV.2</th><th>•</th><th></th></td<>		IV.2	•	
V. RATING REQUIREMENTS 7 V.1 Fan speeds 7 V.2 Sound data 7 V.3 Correction factors 8 a. Correction for wet coil factors for Dx Air Coolers. 8 Table 3: Wet coil factor (C1) for Dx Air Coolers at standard conditions 8 Figure 2: Wet coil factor (C1) for Dx Air Coolers at other conditions 8 b. Correction for temperature differences (C2) for Dx Air Coolers and Air Cooled Condensers. 8 c. Refrigerant and Ethylene Glycol correction factors (C3) 9 d. Correction for in materials (C4) 9 d. Correction for attitude and ambient air pressure (C5) 9 V.4 Additional temperature difference for Air cooled condensers 9 V.5 Correction for Liquid Pressure Drop. 7 V.6 Energy ratio and classes 10 Table 6: Correction factor Clabel,wet for determination of R for Dx Air Coolers 10 Table 7: Energy classes thresholds 10				
V. RATING REQUIREMENTS 7 V.1 Fan speeds 7 V.2 Sound data 7 V.3 Correction factors 8 a. Correction for wet coil factors for Dx Air Coolers. 8 Table 3: Wet coil factor (C1) for Dx Air Coolers at standard conditions 8 Figure 2: Wet coil factor (C1) for Dx Air Coolers at other conditions 8 b. Correction for temperature differences (C2) for Dx Air Coolers and Air Cooled Condensers. 8 c. Refrigerant and Ethylene Glycol correction factors (C3) 9 d. Correction for in materials (C4) 9 d. Correction for attitude and ambient air pressure (C5) 9 V.4 Additional temperature difference for Air cooled condensers 9 V.5 Correction for Liquid Pressure Drop. 7 V.6 Energy ratio and classes 10 Table 6: Correction factor Clabel,wet for determination of R for Dx Air Coolers 10 Table 7: Energy classes thresholds 10		IV.3	Sound performance	7
V.1 Fan speeds 7 V.2 Sound data 7 V.3 Correction factors 8 a. Correction for wet coil factors for Dx Air Coolers. 8 Table 3: Wet coil factor (C1) for Dx Air Coolers at standard conditions. 8 Figure 2: Wet coil factor (C1) for Dx Air Coolers at other conditions. 8 b. Correction for temperature differences (C2) for Dx Air Coolers and Air Cooled Condensers. 8 c. Refrigerant and Ethylene Glycol correction factors (C3). 9 d. Correction for fin materials (C4). 9 d. Correction for altitude and ambient air pressure (C5). 9 e. Correction for Liquid Pressure Drop. 7 V.4 Additional temperature difference for Air cooled condensers. 9 v.5 Correction factors Clabel.wet for determination of R for Dx Air Coolers. 10 Table 6: Correction factor Clabel.wet for determination of R for Dx Air Coolers. 10 V.6 Energy classes thresholds. 10 Torbe 7: Energy classes thresholds. 10			•	
V.2 Sound data 7 V.3 Correction factors 8 a. Correction for wet coil factors for Dx Air Coolers. 8 Table 3: Wet coil factor (C1) for Dx Air Coolers at standard conditions. 8 Figure 2: Wet coil factor (C1) for Dx Air Coolers at other conditions. 8 b. Correction for temperature differences (C2) for Dx Air Coolers and Air Cooled Condensers. 8 c. Refrigerant and Ethylene Glycol correction factors (C3) 9 Table 3: Refrigerant correction factors (C3). 9 d. Correction for fin materials (C4) 9 d. Correction for altitude and ambient air pressure (C5) 9 v.4 Additional temperature difference for Air cooled condensers 9 V.5 Correction for Liquid Pressure Drop. 7 V.6 Energy ratio and classes 10 Table 6: Correction factor Clabel.wet for determination of R for Dx Air Coolers. 10 VI. CERTIFIED PERFORMANCE ITEMS 10				
V.3 Correction factors 8 a. Correction for wet coil factors for Dx Air Coolers. 8 Table 3: Wet coil factor (C1) for Dx Air Coolers at standard conditions 8 Figure 2: Wet coil factor (C1) for Dx Air Coolers at other conditions 8 b. Correction for temperature differences (C2) for Dx Air Coolers and Air Cooled Condensers. 8 c. Refrigerant and Ethylene Glycol correction factors (C3) 9 Table 3: Refrigerant correction factors (C3) 9 d. Correction for fin materials (C4) 9 Table 5: Fin material correction factors (C4) 9 e. Correction for altitude and ambient air pressure (C5) 9 V.4 Additional temperature difference for Air cooled condensers 9 V.5 Correction for Liquid Pressure Drop. 7 V.6 Energy ratio and classes 10 Table 6: Correction factor Clabel, wet for determination of R for Dx Air Coolers 10 Table 7: Energy classes thresholds 10 VI. CERTIFIED PERFORMANCE ITEMS 10		V 2		
a. Correction for wet coil factors for Dx Air Coolers. 8 Table 3: Wet coil factor (C1) for Dx Air Coolers at standard conditions. 8 Figure 2: Wet coil factor (C1) for Dx Air Coolers at other conditions. 8 b. Correction for temperature differences (C2) for Dx Air Coolers and Air Cooled Condensers. 8 c. Refrigerant and Ethylene Glycol correction factors (C3) 9 Table 3: Refrigerant correction factors (C3) 9 d. Correction for fin materials (C4) 9 Table 5: Fin material correction factors (C4) 9 e. Correction for altitude and ambient air pressure (C5) 9 V.4 Additional temperature difference for Air cooled condensers 9 V.5 Correction for Liquid Pressure Drop. 7 V.6 Energy ratio and classes 10 Table 7: Energy classes thresholds 10 VI. CERTIFIED PERFORMANCE ITEMS 10		• •		
Table 3: Wet coil factor (C1) for Dx Air Coolers at standard conditions8Figure 2: Wet coil factor (C1) for Dx Air Coolers at other conditions8b.Correction for temperature differences (C2) for Dx Air Coolers and Air Cooled Condensers8c.Refrigerant and Ethylene Glycol correction factors (C3)9Table 3: Refrigerant correction factors (C3)9d.Correction for fin materials (C4)9Table 5: Fin material correction factors (C4)9e.Correction for altitude and ambient air pressure (C5)9V.4Additional temperature difference for Air cooled condensers9V.5Correction for Liquid Pressure Drop.7V.6Energy ratio and classes10Table 6: Correction factor Clabel,wet for determination of R for Dx Air Coolers10Table 7: Energy classes thresholds10VI.CERTIFIED PERFORMANCE ITEMS10				
b. Correction for temperature differences (C2) for Dx Air Coolers and Air Cooled Condensers		Tab		
c. Refrigerant and Ethylene Glycol correction factors (C3) 9 Table 3: Refrigerant correction factors (C3) 9 d. Correction for fin materials (C4) 9 Table 5: Fin material correction factors (C4) 9 e. Correction for altitude and ambient air pressure (C5) 9 V.4 Additional temperature difference for Air cooled condensers 9 V.5 Correction for Liquid Pressure Drop. 7 V.6 Energy ratio and classes 10 Table 6: Correction factor Clabel,wet for determination of R for Dx Air Coolers. 10 Table 7: Energy classes thresholds. 10 VI. CERTIFIED PERFORMANCE ITEMS 10		Fig		
Table 3: Refrigerant correction factors (C3)				
d. Correction for fin materials (C4) 9 Table 5: Fin material correction factors (C4) 9 e. Correction for altitude and ambient air pressure (C5) 9 V.4 Additional temperature difference for Air cooled condensers 9 V.5 Correction for Liquid Pressure Drop. 7 V.6 Energy ratio and classes 10 Table 6: Correction factor Clabel,wet for determination of R for Dx Air Coolers. 10 Table 7: Energy classes thresholds. 10 VI. CERTIFIED PERFORMANCE ITEMS 10				
Table 5: Fin material correction factors (C4) 9 e. Correction for altitude and ambient air pressure (C5) 9 V.4 Additional temperature difference for Air cooled condensers 9 V.5 Correction for Liquid Pressure Drop. 7 V.6 Energy ratio and classes 10 Table 6: Correction factor Clabel,wet for determination of R for Dx Air Coolers. 10 Table 7: Energy classes thresholds. 10 VI. CERTIFIED PERFORMANCE ITEMS 10				
e. Correction for altitude and ambient air pressure (C5) 9 V.4 Additional temperature difference for Air cooled condensers 9 V.5 Correction for Liquid Pressure Drop. 7 V.6 Energy ratio and classes 10 Table 6: Correction factor Clabel,wet for determination of R for Dx Air Coolers. 10 Table 7: Energy classes thresholds. 10 VI. CERTIFIED PERFORMANCE ITEMS 10				
V.4 Additional temperature difference for Air cooled condensers .9 V.5 Correction for Liquid Pressure Drop				
V.5 Correction for Liquid Pressure Drop		•••		
V.6 Energy ratio and classes 10 Table 6: Correction factor Clabel, wet for determination of R for Dx Air Coolers. 10 Table 7: Energy classes thresholds. 10 VI. CERTIFIED PERFORMANCE ITEMS 10				
Table 6: Correction factor Clabel,wet for determination of R for Dx Air Coolers				
Table 7: Energy classes thresholds				
VI. CERTIFIED PERFORMANCE ITEMS10				
	VI.			
	VII			

I. PURPOSE

The purpose of this standard is to establish definitions and specifications for the related programme, in accordance with Operational Manual OM-2, for testing and rating of Heat Exchangers divided in 3 sub-programmes:

- Direct Expansion Forced Convection Unit Air Coolers for Refrigeration, designated as "Dx Air Coolers"
- Forced Convection Air Cooled Condensers for Refrigeration, designated as "Air Cooled Condensers"
- Forced Convection Air Cooled Liquid Coolers, designated as "Dry Coolers"

II. SCOPE

The programme for Heat Exchangers applies to products using axial flow fans (see OM-2, certify-all requirements).

The following products are excluded from the Certification Programme for Heat Exchangers within Eurovent Certification:

- Products units using centrifugal type fans;
- Units working at 60 Hz.

In particular, the following products are also excluded from the Certification Programme for Dx Air Coolers and Air Cooled Condensers within Eurovent Certification:

- Products using refrigerants non listed in the table 3 of the present document,
- Product ranges of Dx Air Coolers where maximum standard SC2 capacity is below 1.5 kW;
- Product ranges of Air Cooled Condensers where maximum standard capacity under DT1 15 K is below 2.0 kW;

III. DEFINITIONS

III.1 Product types and modularity

<u>Direct Expansion Forced Convection Unit Air Cooler for Refrigeration ("Dx Air Coolers")</u>: As defined within EN 328:2014.

Forced Convection Air Cooled Condenser for Refrigeration ("Condenser"): As defined within EN 327:2014.

Forced Convection Air Cooled Liquid Cooler ("Dry Cooler"): As defined within EN 1048:2014.

<u>Dx Air Coolers Configuration</u>: Arrangement of components in relationship with the airflow. The following abbreviation shall be used:

- SD-B Single Discharge, Blow through
- SD-D Single Discharge, Draw through
- DD-B Dual Discharge, Blow through
- DD-D Dual Discharge, Draw through

<u>Modularity</u>: a range of Heat Exchanger is considered modular when each module is composed by a coil, a fan motor and a casing having the same following common data:

- tube type and diameter
- fin type
- fin spacing
- coil height and number of tubes
- coil depth and number of rows
- finned length

- fan motor type
- casing construction

III.2 Capacity and energy efficiency

Standard capacity:

- For Dx Air Coolers, Dry cooling capacity for R404A of the Dx Air Cooler at the standard conditions stated in EN 328:2014
- For Air Cooled Condensers, capacity for R404A of the Air Cooled Condenser at the standard conditions stated in EN 327:2014
- For Dry Coolers, capacity of the Dry Cooler for water at the standard conditions stated in EN 1048:2014

Nominal capacity:

- Standard capacity of the Dx Air Cooler corrected for refrigerant, operating temperature difference, humidity and fin material.
- Standard capacity of the Air Cooled Condenser corrected for refrigerant, operating temperature difference and fin material.
- Standard capacity of the Dry Cooler corrected for fluid, operating temperature difference and fin material.

<u>Reference capacity of a modular range:</u> Average of the capacities (at SC2 condition for Dx Air Coolers) of the models of the modular range that can be tested in the independent laboratory.

<u>Modular capacity</u>: Reference capacity multiplied by the number of modules (for modular units that cannot be tested in the independent laboratory).

III.3 Surface area

a. <u>Tubes and fins</u>

Surface area: The Surface Area, SA, per tube, per meter-finned length is:

SA =
$$(2 / S_{fin} / 1000).r.(S_h.S_d - \frac{\pi}{4}.(d_T^2 + n \times d_h^2)) + \pi.d_T / 1000^1$$

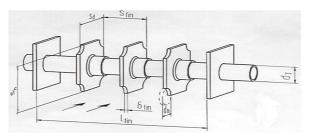


Figure 1: Definitions for *declared* surface area calculation

The Total Surface area, TS [m²] is:

 $TSA = SA \times I_{fin} \times Number of tubes$

Where: $S_h = fin height per tube [mm]$

- S_d = fin depth per tube [mm]
 - S_{fin}= fin spacing [mm]
- r = ratio of enhanced fin surface area to flat, claimed by applicant (to be supported by drawing and calculations if greater than 1)
- dT = tube outside diameter [mm]

¹ <u>Note</u>: The effect of fin thickness δ_{fin} on the surface area is usually very small (less than 1%) and has, therefore, been excluded.

- d_h = diameter of other holes in fin, e.g. heater holes [mm]
- lfin = finned length [m]
- n = number of other holes (d_h) per tube holes (d_T).

A drawing shall be provided for each fin type submitted, clearly showing all holes or shapes that enhance or reduce the surface area, together with the calculation model used to calculate the surface area if this differs from that set out above.

b. Micro-channels

Micro-channel Air-side Heat Transfer Surface


$$\mathbf{A} = \mathbf{A}_{\mathrm{f}} + \mathbf{A}_{\mathrm{Ta}} \qquad [\mathrm{m}^2]$$

Fin Surface A_f

$$A_{f} = 2 \cdot F_{L} \cdot T_{d} \cdot n_{LFp} \cdot n_{r} \qquad [m^{2}]$$


$$n_{LFp} = \frac{B^{-2C}}{F_p} \qquad [-]$$

$$F_L = \sqrt{H^2 + F_p^2} \qquad [m]$$

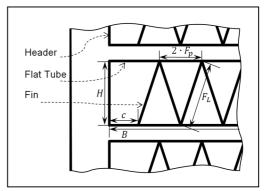

Flat Tube-Air-side Surface ATa

$$\mathbf{A}_{\mathrm{Ta}} = [2 \cdot (\mathbf{T}_{\mathrm{d}} - \mathbf{D}_{\mathrm{m}}) + \mathbf{D}_{\mathrm{m}} \cdot \boldsymbol{\pi}] \cdot \mathbf{B} \cdot \mathbf{n}_{\mathrm{T}} \qquad \left[\mathbf{m}^{2}\right]$$



Where:

 F_{L} = fin length [mm] n_r = number of fin rows [-] n_{LFp} =number of fin pitch widths [-] B= coil width without headers [mm] c=no fin area [mm] F_p = fin pitch [mm] H=fin height [mm] T_d = flat tube width [mm] D_m =flat tube height [mm] n_T =number of flat tubes in coil [-]

III.4 Heat Flux

Heat flux: Standard capacity divided by the total heat transfer surface area (air side).

III.5 Basic Model Group

<u>Basic Model Group</u>: Set of the same type of Heat Exchangers (COOL, COND, DCOOL), having the same reference geometry.

IV. TESTING REQUIREMENTS

IV.1 Refrigerant

Tests shall be performed with R 507A for Dx Air Coolers and Air Cooled Condensers, and water for Dry coolers.

IV.2 Air flow and Thermal performance

Standard ratings shall be verified by tests conducted at standard rating conditions in accordance with:

- EN 328:2014 for Dx Air Coolers (reported in Table 1)
- EN 327:2014 "Test procedures for establishing performance of forced convection air cooled refrigerant condensers" for Air Cooled Condensers
- EN 1048:2014 for Dry Coolers

	· · ·	
Standard Conditions for Refrigerants	Air Inlet Temperature (°C)	Evaporating Temperature (°C)
SC1	10	0
SC2	0	-8
SC3	-18	-25
SC4	-25	-31

Table 1: Standard Conditions (SC's) for Dx Air Coolers [EN 328]


The temperature difference for the test on Air Cooled Condensers is 15 K, but can be reduced to 10 K in special cases (see V.4).

IV.3 Sound performance

Sound performance shall be verified tests conducted with the following standard: EN 13487:2003 "Heat Exchanger - Forced convection air cooled refrigerant condensers and dry coolers - sound measurement.

IV.4 Correction for Liquid Pressure Drop for Dry Coolers

For evaluation of Liquid Pressure Drop, the following equation shall be used:



Where: ΔP: Liquid side pressure drop [kPa] Q_m: Mass flow rate of the liquid [kg/s]

V. RATING REQUIREMENTS

V.1 Fan speeds

For AC fans, the performance shall be declared under the low speed for a star configuration and the high speed for a delta configuration. For EC fans we limit the number of declared speeds to 2, based on the airflow given by the equivalent AC fan. Performance can be declared at up to 5 fan speeds for variable speed fans.

V.2 Sound data

When provided, sound data levels shall be calculated in accordance with EN 13487:2003 at 10 m distance For Condensers and Dry Coolers.

V.3 Correction factors

a. Correction for wet coil factors for Dx Air Coolers

Standard capacities are measured under dry conditions, without condensation or frost formation on the Dx Air Cooler surface.

A Dx Air Cooler can be rated in literature with:

- Nominal capacities plus Standard capacities, or
- Nominal capacities plus Wet enhancement factors relating to the standard conditions covered.

The nominal capacities at standard conditions shall be calculated as:

Nominal Capacity Wet = Standard Capacity Dry x C1

where the relationship factors C1 are given in Table 2:

Table 2: Wet coil factor (C1) for Dx Air Coolers at standard conditions

Standard Conditions	RH	Wet Enhancement Factor
SC 1	85%	1.35
SC 2	85%	1.15
SC 3	95%	1.05
SC 4	95%	1.01

Under other conditions the wet factor enhancement shall be based on the following graph (Figure 2). In any case, the maximum enhancement factor, dry to wet, excluding any other correction for DT1, fin material etc., shall not exceed 1.35.

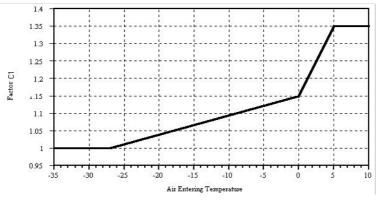


Figure 2: Wet coil factor (C1) for Dx Air Coolers at other conditions

<u>Note</u>: The graph is based on the entering air and not on the dew point evaporating temperature.

b. <u>Correction for temperature differences (C2) for Dx Air Coolers and Air</u> <u>Cooled Condensers</u>

For refrigerants with low (below 1 K for Dx Air Coolers and below 3 K for Air Cooled Condensers) or no glide, the capacity shall be assumed to vary directly with the temperature difference DT1 between the entering air and dew point evaporating temperature, i.e.:

Nominal Capacity (2) = Nominal Capacity Wet (1) x C2

where C2 = Required DT1 / Standard DT1

Standard DT1 = 15 for Air Cooled Condensers

Higher glide refrigerants are currently excluded from the scope of this standard.

c. <u>Refrigerant and Ethylene Glycol correction factors (C3)</u>

Unless independently substantiated, at standard conditions, the following average relationship shall exist between the capacities:

Product type Condition		Dx Air (Coolers		Air Cooled Condensers	Glide @ 40° C
Refrigerant	SC 1	SC 2	SC 3	SC 4	DT1 = 15 K or DT1 = 10 K	(information only)
R404A (reference)	1	1	1	1	1	0.5
R134a	0.93	0.91	0.85	-	0.96	0
R507A [REFPROP 9.1]	0.97	0.97	0.97	0.97	1	0
R407A	1.19	1.24	1.28	1.32	0.89	4.5
R407C	1.21	1.26	1.31	1.36	0.87	5.06
R407F	1.19	1.24	1.29	1.35	0.89	

Table 3: Refrigerant correction factors (C3)

These factors may, if required, be presented using a different base refrigerant.

Nominal Capacity (3) = Nominal Capacity (2) x C3

For 34% Ethylene Glycol by volume, the capacity and pressure drop at the standard conditions shall be assumed to be:

Nominal Capacity (3) = Standard Capacity (water) x C3, where C3 = 0.95

Pressure Drop = Standard Pressure Drop (water) x 1.2

d. Correction for fin materials (C4)

For other fin materials where the thickness is not less than the standard thickness, the following relationship shall be assumed to apply. Other factors may be used if independently substantiated:

Table 4: Fin material correction factors (C4)

Fin Material	Factor C4
Aluminium	1
Coated Aluminium	0.97
Copper	1.03

Nominal Capacity (4) = Nominal Capacity (3) x C4

e. <u>Correction for altitude (C5)</u>

Nominal Capacity (5) = Nominal Capacity (4) x C5

Where: $C5 = (1 - 0.000075 \times H)$

Н

= Altitude above sea level [m]

This altitude correction may be presented if required.

V.4 Additional temperature difference for Air cooled condensers

For all Air Cooled Condensers, if the proportionality to TD from 15K to 10K is respected, capacities under TD 10K can be published without supplementary test. If the proportionality is not respected, a test under 10K is mandatory.

V.5 Energy ratio and classes

Energy Ratio R:

• For Dx Air Coolers Coolers: Nominal capacity [kW] divided by the total certified power input of the fan motors Fan power [kW] at the standard rating conditions, multiplied by the square root of (the fin spacing divided by 4.5).

If rated at SC2, standard capacity shall be at SC2 under wet conditions.

$$R_{DXaircoole rs} = \frac{Capacity @ SC2 wet}{Fan power} \times \sqrt{\frac{fin spacing}{4.5}}$$

Otherwise, we will use minimum of the equation below between the different SCs, where C_{label} , wet is given in Table 5:

$$R_{DXaircoolers} = \frac{P_{SC,wet} \times C_{label,wet}}{Fan \text{ power}} \times \sqrt{\frac{\text{fin spacing}}{4.5}}$$

 For Air Cooled Condensers and Dry Coolers: Nominal capacity at DT1 = 15 K [kW] divided by the total certified power input of the fan motors [kW] at the standard rating conditions.

P		Capacity @ $DT1 = 15K$
R Condensers, Dry coolers	-	Fan power

Energy Class: Letter corresponding to an Energy Ratio in a range defined in Table 5.

Table 5: Correction factor Clabel, wet for determination of R for Dx Air Coolers

wet	C1	DT	C _{label, wet} 1,15/C1*8/DT
SC1	1.35	10	0.68
SC2	1.15	8	1
SC3	1.05	7	1.25
SC4	1.01	6	1.52

Table 6: Energy classes thresholds

	Energy	Dx Air Coolers	Condensers, Dry coolers		
Class	consumption	$R_{\text{DXaircoole rs}} = \frac{P_{\text{SC, wet}} \times C_{\text{label, wet}}}{Fan \text{ power cons}} \times \sqrt{\frac{\text{fin spacing}}{4.5}}$	$R_{Condensers, Dry coolers} = \frac{Capacity @ DT1 = 15K}{Fan power cons}$		
A+	Extremely low	R ≥ 73	R≥ 226		
А	Very Low	47 ≤ R<73	169 ≤ R< 226		
В	Low	35 ≤ R< 47	109 ≤ R< 169		
С	Medium	25 ≤ R< 35	69 ≤ R< 109		
D	High	16 ≤ R< 25	37 ≤ R< 69		
E	Very high	R< 16	R< 37		

VI. CERTIFIED PERFORMANCE ITEMS

The following performance items shall be certified by tests:

- Standard capacity (using water for Dry coolers) [kW]
- Fan power input [W]
- Energy Ratio R [-]
- Energy class [-]
- Air volume flow [m³/h]
- External surface area [m²]
- Liquid side pressure drop for Dry Coolers [kPa]
- A-weighted sound pressure level for Air Cooled Condensers and Dry Coolers [dB(A)]
- A-weighted sound power level for Air Cooled Condensers and Dry Coolers [dB(A)]

VII. TOLERANCES

When tested in independent laboratory, the characteristics obtained shall not differ from the claimed values by more than:

- Standard capacity -8 %
- Fan power input +10 % with a minimum of 3W
- Air volume flow +/-10 %
- External surface area +/-4 %, checked indirectly by checking the following physical value:
 - Finned length \pm 0,5 %, with a minimum of 5 mm
 - Height of the coil $\pm 5 \text{ mm}$
 - Depth (width) of the coil $\pm 5 \text{ mm}$
 - Total number of fins* ± 4 %, at least 2 fins
 - Diameter of (expanded) tube outside the coil* ± 1 mm (*) except for the micro-channels
- Liquid side pressure drop +20 %
- A-weighted sound pressure level +2 dB(A)
- A-weighted sound power level +2 dB(A)

For each model of a modular range, the capacity claimed by the Participants shall not differ from the modular capacity by more than +8%. The average of the positive differences between the modular capacities and claimed capacities shall not exceed +5%.